

## Certificate of Analysis

**Company:** Cavelion LC

**Sample ID:** PP

**Lot:** N/A

**Report Date:** 5/24/2023

**Matrix:** Flower

**Date Analyzed:** 5/23/2023

**Customer ID:** 221021-3

**Date Sampled:** N/A

**Analyst:** 011

**Grower License #:** SCLT0073

**Date Received:** 5/17/2023

**Report ID:** C230517AB

### Cannabinoid Summary

Cannabinoid Profile	LOQ (mg/g)	Concentration (mg/g)	Weight (%)
CBDVA	0.0005	<LOQ	<LOQ
CBDV	0.0012	<LOQ	<LOQ
CBDA	0.0008	0.81	0.08
CBGA	0.0008	3.92	0.39
CBG	0.0019	<LOQ	<LOQ
CBD	0.0019	<LOQ	<LOQ
THCV	0.0021	<LOQ	<LOQ
CBN	0.0013	<LOQ	<LOQ
Δ9-THC	0.0020	2.40	0.24
Δ8-THC	0.0019	<LOQ	<LOQ
THC-A	0.0034	203.98	20.40
CBC	0.0024	<LOQ	<LOQ
<b>Total THC</b>		<b>181.29</b>	<b>18.13</b>
<b>Total CBD</b>		<b>0.71</b>	<b>0.07</b>
<b>Total Cannabinoids</b>		<b>211.11</b>	<b>21.11</b>

**18.13%**  
**Total THC**

**0.07%**  
**Total CBD**

**21.11%**  
**Total Cannabinoids**

**0.24%**  
**Δ9-THC**

**8.11%**  
**Percent Moisture**

**1 : 0**  
**THC : CBD Ratio**



Cannabinoids Methodology: High Performance Liquid Chromatography (HPLC) using PerkinElmer FLEXAR™ with Photo Diode Array Detector (PDA)

Total CBD and total THC are calculated values, to account for assumed decarboxylation from the acid form (THCA or CBDA) to the neutral form, causing weight loss of the acid group. These values are calculated as follows:

Total THC = (THCA × 0.877) + Δ9-THC      Total CBD = (CBDA × 0.877) + CBD  
 Ratio of Total CBD: Total THC      Reagent Blanks: < LOQs for all analytes

LOQ = The lowest quantity that this method can reliably detect. Any cannabinoid that was not detected is assumed to be less than the stated LOQ (<LOQ).

All results reflect dry weight of material, based on % moisture of the sample.

Measurement of Uncertainty (MU): the parameter, associated with the result of a measurement, that characterizes the dispersion of the values that could reasonably be attributed to the particular quantity subject to measurement.

Δ9-THC MU = ±0.005%      Total THC MU = ±0.007%

All other cannabinoid MU values are available upon request.

All moisture analysis is determined by loss-on-drying measurement using OHAUS Model MB90 Moisture Content Readers.

This report shall not be reproduced except in full without approval of the laboratory. This is to provide assurance that parts of a report are not taken out of context. Results apply to the samples as received.

Certified by: *Luke E. M.*  
 Luke Emerson Mason (Laboratory Director, Bia Diagnostics)

## Certificate of Analysis

**Company:** Cavelion LC

**Sample ID:** PP

**Lot:** N/A

**Report Date:** 5/30/2023

**Matrix:** Flower

**Date Analyzed:** 5/26/2023

**Customer ID:** 221021-3

**Date Sampled:** N/A

**Analyst:** 035

**Grower License #:** SCLT0073

**Date Received:** 5/17/2023

**Report ID:** C230517AB

### Terpenes Summary

Terpene	LOQ (mg/g)	Results (mg/g)	Weight (%)
$\alpha$ - Pinene	0.010	0.944	0.094
Camphene	0.010	0.194	0.019
$\beta$ -Myrcene	0.010	1.681	0.168
b-Pinene	0.010	1.317	0.132
3-Carene	0.010	<LOQ	<LOQ
$\alpha$ -Terpinene	0.010	<LOQ	<LOQ
Limonene	0.010	3.039	0.304
p-Cymene	0.010	<LOQ	<LOQ
Ocimene	0.010	<LOQ	<LOQ
Eucalyptol	0.010	<LOQ	<LOQ
$\gamma$ -Terpinene	0.010	0.016	0.002
Terpinolene	0.010	0.104	0.010
Linalool	0.010	2.365	0.237
Isopulegol	0.010	<LOQ	<LOQ
Geraniol	0.010	0.040	0.004
Caryophyllene	0.010	4.839	0.484
$\alpha$ -Humulene	0.010	1.502	0.150
Trans-Nerolidol	0.010	<LOQ	<LOQ
Cis-Nerolidol	0.010	0.430	0.043
Guaiol	0.010	<LOQ	<LOQ
Caryophyllene Oxide	0.010	0.035	0.004
$\alpha$ -Bisabolol	0.010	<LOQ	<LOQ
<b>Total Terpenes</b>		16.506	1.651

8.11%

 Percent  
Moisture


LOQ = The lowest quantity this method can reliably detect. Any terpene that was not detected is assumed to be less than the stated LOQ (<LOQ).

Terpene Methodology: Headspace Sampler, Gas Chromatography-Mass Spectrometry (GC-MS), using Perkin Elmer Clarus® SQ8 GC MS

Reagent Blanks: &lt; LOQs for all analytes

All results reflect dry weight of material, based on % moisture of the sample.

All moisture analysis is determined by loss-on-drying measurement using OHAUS Model MB90 Moisture Content Readers.

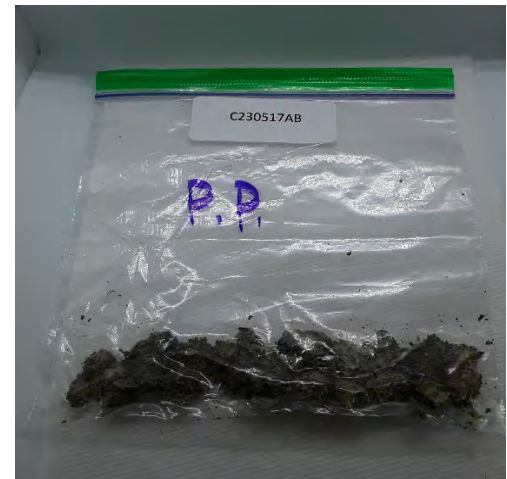

This report shall not be reproduced except in full without approval of the laboratory. This is to provide assurance that parts of a report are not taken out of context. Results apply to the samples as received.

Certified by:



Luke Emerson Mason (Laboratory Director, Bia Diagnostics)



## Certificate of Analysis

**Company:** Cavelion LC

**Sample ID:** HL3

**Lot:** N/A

**Matrix:** Flower

**Report Date:** 5/26/2023

**Date Analyzed:** 5/26/2023

**Customer ID:** 221021-3

**Date Sampled:** N/A

**Analyst:** 011


**Grower License #:** SCLT0073

**Date Received:** 5/17/2023

**Report ID:** C230517AD

### Pathogen Summary

Target Pathogens	Method	LOD (cfu/g)	Result (cfu/g)
Aspergillus - flavus, fumigatus, niger, terreus	Aspergillus AOAC PTM No. 032104	5	<LOD
STEC	STEC Virx AOAC PTM No. 121203	5	<LOD
Salmonella spp.	Salmonella II AOAC PTM No. 010803	5	<LOD

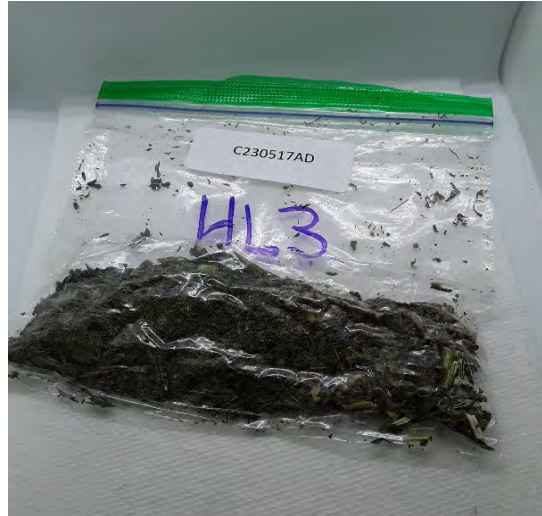

Test Methodology: Bio-Rad IQ-Check PCR Kits

cfu/g = colony forming units per gram

LOD = The lowest quantity that this method can reliably detect. Any microbial growth that was not detected is assumed to be less than the stated LOD (&lt;LOD).

Reagent Blanks: &lt;LOD for all analytes

This report shall not be reproduced except in full without approval of the laboratory. This is to provide assurance that parts of a report are not taken out of context. Results apply to the samples as received.

Certified by: *Luke E. M.*  
 Luke Emerson Mason (Laboratory Director, Bia Diagnostics)